

## CHARGING

Your system kit includes a charging cradle designed to hold and charge the brush handle. The green lights on the back of the handle indicate charge level. If you keep the handle someplace other than on the charger, remember to charge the handle after every 30 minutes of use.

Place your Clarisonic in its charging cradle overnight to recharge it. A full charge allows 30 minutes of use. If it is used for more than 30 minutes without being charged, the brush handle will beep immediately after use to alert you to place it in the cradle for charging.



For proper charging place handle in the charger as shown

## CLEANSER AND BRUSH HEADS

Your Clarisonic Skin Care System includes samples of Clarisonic cleansers optimized for use with your Clarisonic. We also offer Normal and Delicate brush heads. Purchase Clarisonic products from your skin care professional, spa, Clarisonic retailer, or from clarisonic.com.

888-525-2747 | clarisonic.com



## IMPORTANT CAUTIONS AND WARNINGS

If you are under a doctor's care for any skin condition or if you think you may have a skin condition, please consult your physician before using the Clarisonic. Refer to our website for more information.

We recommend that you do not share brush heads with another individual.

**Do not** share brush heads if you and/or any other Clarisonic user suffer from any skin conditions.

We recommend that you start with one of the Clarisonic cleansers that has been optimized for gentle daily use with the Clarisonic Skin Care Brush. **Do not** use the Clarisonic Skin Care Brush with mechanical exfoliants such as microbeads and shells.

Using the Clarisonic to remove makeup may stain the bristles, but will not affect performance. If discoloration occurs, clean the brush head with soap and water.

## IMPORTANT SAFEGUARDS

### READ ALL INSTRUCTIONS BEFORE USE

When using electrical products, especially when children are present, basic safety precautions should always be followed, including but not limited to the following:

#### DANGER—To reduce the risk of electrocution:

- 1. Do not** place or store the Clarisonic charging cradle where it can fall or be pulled into a tub or sink.
- 2. Do not** place the Clarisonic charging cradle in or drop into water or other liquid, or use the cradle while bathing.
- 3. Do not** reach for a Clarisonic charging cradle that has fallen into water. Unplug immediately.

Never operate the Clarisonic brush handle if it is damaged or the charging cradle if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call Clarisonic at 888-525-2747.

The supply cord cannot be replaced. If the cord is damaged, the charging cradle must be unplugged and replaced. Call Clarisonic at 888-525-2747.

NOTE: This equipment has been tested and found to comply with Part 18 of the FCC Rules. Refer to our website for further information.

## WARRANTY

We are happy to offer a 60 day money-back guarantee if you are for any reason unsatisfied with the purchase of your Clarisonic from an authorized dealer. Call Customer Service at 888-525-2747 to make arrangements for the return.

In addition, every Clarisonic comes with a two-year warranty covering any problems resulting from everyday use of the product. Call Customer Service at 888-525-2747 if you feel your Clarisonic is not operating properly.

For more comprehensive information, new products, and to see how others are using their Clarisonic, visit [clarisonic.com](http://clarisonic.com).



clarisonic  
PRO PROFESSIONAL  
SKIN CARE

skin care brush

USER GUIDE

clarisonic  
SKIN CARE

©Pacific Bioscience Laboratories, Inc. 2008.  
All rights reserved. Clarisonic is a registered trademark of Pacific Bioscience Laboratories, Inc.

Pacific Bioscience Laboratories, Inc.  
13222 SE 30th Street #A1  
Bellevue WA 98005  
Toll Free: 888-5-CLARISONIC or 888-525-2747



- A HANDLE**
- B BRUSH HEAD** (Sensitive)
- C ON/OFF BUTTON**
- D POWER LEVEL BUTTON**
- E CHARGING CRADLE**
- F CHARGE INDICATOR**

## YOUR CLARISONIC

The Clarisonic sonic technology works with the natural elasticity of your skin to provide deep, thorough, gentle daily cleansing. Cleansing is the foundation of a complete skin care ritual. Oscillating back and forth at a sonic frequency that produces 300 movements per second, a flexing action is created between the outer and inner brushes that works deep within the pores to gently loosen dirt and oil. The brush motion effectively cleans, clarifies and stimulates, resulting in smoother and softer feeling and looking skin.

### TO USE

Prior to the first use, charge the Clarisonic handle for 24 hours.

If you use makeup, remove eye makeup by hand.


Wet your skin and the brush head with warm water.

Liberal apply cleanser to your skin or to the brush head. Push the on/off button to turn your Clarisonic on and gently move the brush using a small circular motion, beginning on the forehead, then moving to the nose/chin area and the cheeks at the T-timer™ prompts.

Pressing too hard will impede the motion of the brush and reduce its effectiveness. The outer brushes are designed to contain any residual mist from the brush oscillation, so be sure to hold the brush head flush to your skin.

The Clarisonic handle is waterproof and may be used in the shower or bathtub. Refer to Important Safeguards regarding the charging cradle.

Gently move the brush using a small circular motion.

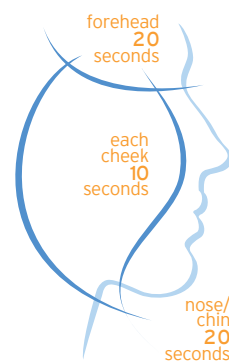

Cleanse your face using our T-timer recommended duration and zones as shown above.

## CUSTOMIZING YOUR CLARISONIC

The Clarisonic is packaged with the Sensitive brush head (white base) installed. We also offer optional brush heads for different skin types.

Your Clarisonic is programmed to operate in a variety of power settings and brushing durations. The factory setting is low power for one minute.

### POWER LEVEL

The Clarisonic PRO offers a choice of 3 power levels: high, normal and low. Power level is indicated both audibly and visually. To change the power level, press the power level button while the Clarisonic is on.

Power level	Audible indication	Visible indication
High	5 ascending beeps	both red lights on
Normal	3 ascending beeps	upper red light on
Low	3 descending beeps	lower red light on

### CLEANSING TIMER (T-TIMER)

For even and thorough cleansing of your face, the Clarisonic features a proprietary one-minute T-timer that beeps and pauses momentarily to indicate it is time to move to another part of your face. We recommend 20 seconds on your forehead, 20 seconds on your nose/chin, and 10 seconds on each cheek.

The T-Timer settings are indicated by three different audible sequences. To change the setting, press and hold the on/off button for 2 seconds. To change to a different setting, release the on/off button, then press and hold.

Audible indication	Cleansing duration	T-TIMER™ beeps
1 long beep & 2 short beeps	2 minutes	at 40, 80, and 100 seconds
1 long beep only	2 minutes	none
1 long beep & 1 short beep	1 minute (this is factory selected default)	at 20, 40, and 50 seconds

To pause the cleansing cycle for up to 30 seconds, simply press the on/off button. The red light(s) flash in pause mode. To resume, press the on/off button.

## CARING FOR YOUR CLARISONIC

To keep your Clarisonic in optimum condition, care for it as follows. Do not use abrasive cleaners or chemicals to clean any part of the Clarisonic. Do not put any part of the Clarisonic in a dishwasher.

### HANDLE

Once a week wash the handle using warm soapy water to remove any residue buildup. The handle is sealed and fully waterproof. Never attempt to open the brush handle for any reason.

### CHARGING CRADLE

**IMPORTANT:** Unplug the charging cradle before you clean it. After unplugging the cradle, wipe it with a soft, damp cloth. Do not immerse the charging cradle in water.

### BRUSH HEADS

We recommend that the Clarisonic brush heads be replaced every 90-120 days as the bristles become fatigued and less effective over time. Once a week, remove the brush head from the handle and rinse with warm soapy water to remove any residue.

To remove the brush head, ① grip the brush head firmly, then push and twist it counter-clockwise (like a medicine cap). ② Pull the head away from the handle.

To attach the brush head, push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

**TIP:** Use the brush head cap to easily remove and attach the brush head with a simple twist. Purchase additional or replacement brush heads from your skin care professional, physician, medi-spa or Clarisonic retailer. Or call 888-525-2747 or visit [clarisonic.com](http://clarisonic.com).

